




PRO COMP SUSPENSION

Suspension Systems that Work!

**CAM BOLT
INSTRUCTIONS
8.7.03**

INSTRUCTIONS:

When installing the cam bolts make sure the washers are under the cams against the body. This will allow the cam to freely rotate without binding.

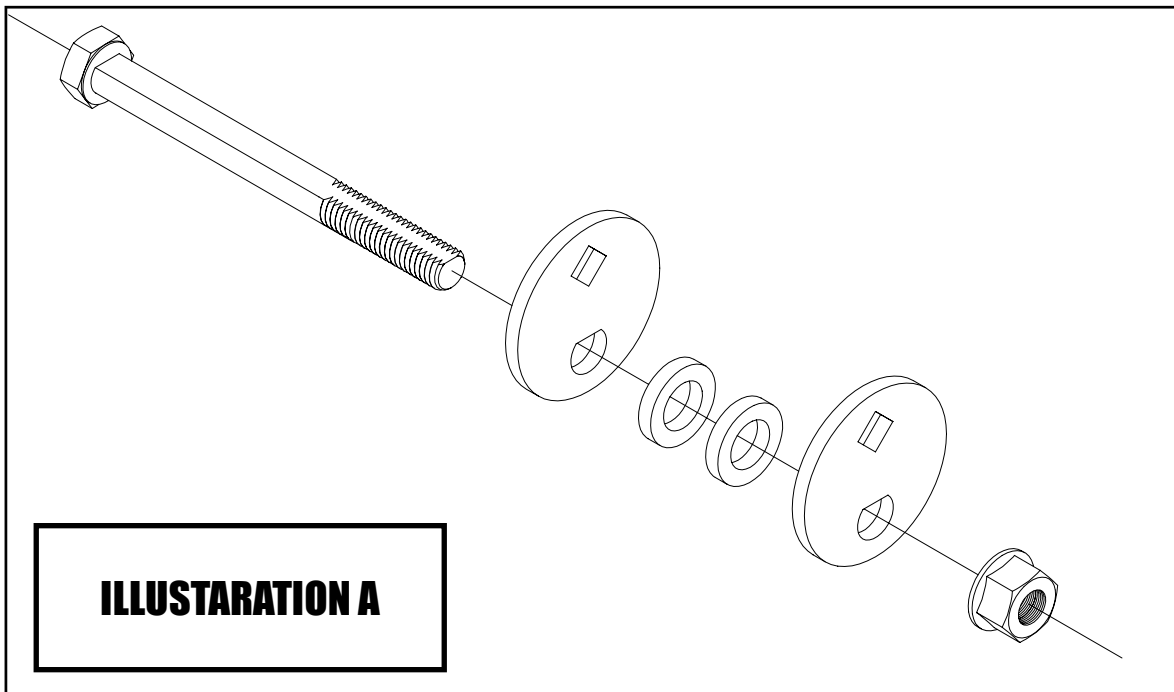

2360 Boswell Road
Chula Vista, CA 91914
Phone 619.216.1444
Fax 619.216.1474
E-Mail tech@explorerprocomp.com