

# INSTALLATION INSTRUCTIONS



## SIDE MIRROR PAIR - BLACK 1955-1995 JEEP CJ & WRANGLER YJ SB7617


### COMPONENTS




Part	QTY
Mirror Head	2
Mirror Arm	2
M6-1.0x15mm Hex Head Bolt	8
M6 Split Lock Washer	8
M6 Flat Washer	8

### INFORMATION

#### MIRROR ASSEMBLY

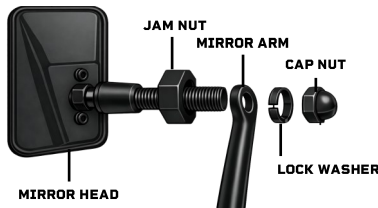

#### ADJUSTMENT

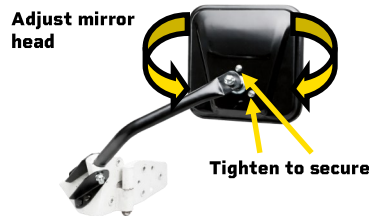

#### WARRANTY



### INSTALL



Install the mirror heads onto the mirror arms first. On the driver's side, remove any existing hardware from the four face holes on your CJ or YJ windshield hinge. Align the mirror arm with the holes and loosely install the four M6 bolts with flat washers and split lock washers. Adjust the arm to your preferred position, then tighten the hardware to 5 ft-lbs. Repeat the process on the passenger side.

**For YJ owners:** These mirrors work with the Smittybilt 7603 Windshield Hinge Kit and other similar aftermarket hinges.

Installation is complete.



For Tech Support / Warranty Information please call 1-888-717-5797, email [info@smittybilt.com](mailto:info@smittybilt.com)  
Smittybilt, 1017 W 600 N, Suite 4, Ogden, UT 84404